

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: VERONA POLICE DEPARTMENT 600 BLOOMFIELD AVE. BLOOMFIELD NJ 07044		2. Contact: N/A	4. Date: 09-19-2013
		3. Phone Number: 973-857-4809	5. County: ESSEX COUNTY
6. Alcotest Instrument Serial Number: ARWM-0092	7. Simulator Component Serial Number: N/A	8. Temperature Probe Component Serial Number: N/A	

9. Reason for Service:
RECEIVED A COMPLAINT OF A CORRUPT MEMORY ERROR MESSAGE DISPLAYED DURING A TESTING SEQUENCE.


10. Comments:
UPON INSPECTION OF THE ALCOTEST, IT WAS DEEMED THAT A MOTHERBOARD FAILURE OCCURRED DURING THE TESTING PROCESS. UTILIZING THE BLACK KEY. THE MEMORY WAS REVIEWED TO BE AT 0%. A SEARCH OF THE DATABASE REVEALED THAT THE LAST DOWNLOAD WAS SOLUTION CHANGE SEQUENTIAL FILE NUMBER 00245. SOLUTION CHANGE 245 WAS PERFORMED ON 08-21-2013 AND WAS PART OF MY OWN RECALIBRATION OF THE INSTRUMENT. PLEASE EVALUATE MOTHERBOARD.

LAST KNOWN SEQUENTIAL FILE NUMBER: 00245

- 11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
- 12. The above Instrument/Component is placed out of service pending further evaluation.
- 13. The above Instrument/Component is placed back in service.

"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

TPR I. M. ARROYO 6291
Name & Badge Number (Print)


 Signature 9/19/13
 Date



Invoice

Dräger Safety Diagnostics, Inc

Customer no Sales order no. Delivery no Ship date
150061090 10456680 80577876 02/08/2011

Invoice no Invoice date
90639829 02/08/2011

Please reference on payment

Item#	Quant.	Part no. Description	Unit price USD	%	Extended amount USD
		-----	-----	-----	-----
		Subtotal			633.50
		-----	-----	-----	-----
		Total			633.50
		=====	=====	=====	=====
<p>Terms of payment: Net 30 days</p>					
<p>NOTE: All claims for shortages/defects must be reported within 10 business days after receipt of order. All returns must have our RMA# clearly marked on the box. Please call Customer Service at 866-385-5900.</p>					

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: VERONA PD	2. Contact: TPR II. MARCOS ARROYO	4. Date: 02-17-2011
	3. Phone Number: 609-947-3643	5. County: ESSEX COUNTY
6. Alcotest Instrument Serial Number: ARWM-0092	7. Simulator Component Serial Number: N/A	8. Temperature Probe Component Serial Number: N/A

9. Reason for Service:
ALCOTEST INSTRUMENT # ARUM-0067 WAS PLACED BACK INTO SERVICE.

10. Comments:

- 11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
- 12. The above Instrument/Component is placed out of service pending further evaluation.
- 13. The above Instrument/Component is placed back in service.

"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

TPR II. M. ARROYO #6291

Name & Badge Number (Print)

TPR II M Arroyo

Signature

2/17/11

Date

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: VERONA POLICE DEPARTMENT 600 BLOOMFIELD AVENUE VERONA NJ 07044		2. Contact: TPR II. M. ARROYO #6291	4. Date: 01-10-2011
		3. Phone Number: 609-947-3643	5. County: ESSEX
6. Alcotest Instrument Serial Number: <p style="text-align: center;">ARWM-0092</p>	7. Simulator Component Serial Number: <p style="text-align: center;">N/A</p>	8. Temperature Probe Component Serial Number: <p style="text-align: center;">N/A</p>	

9. Reason for Service:
RESPONDED TO VERONA PD REFERENCE BREATH HOSE ISSUES.

10. Comments:
UPON MY INSPECTION OF INSTRUMENT ARWM-0092, BREATH HOSE COMPONENT WAS OBSERVED TO BE TAMPERED. PLEASE CHECK AND EVALUATE AS NEEDED.

11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
12. The above Instrument/Component is placed out of service pending further evaluation.
13. The above Instrument/Component is placed back in service.

"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

TPR II. M. ARROYO #6291

Name & Badge Number (Print)

Signature

Date

TPR II M Arroyo 6291 1/10/11

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: VERONA POLICE DEPARTMENT 600 BLOOMFIELD AVE. VERONA NJ 07044	2. Contact: SGT. TRAETTINO	4. Date: 10-29-2013
3. Phone Number: N/A		5. County: ESSEX COUNTY
6. Alcotest Instrument Serial Number: ARWM-0092	7. Simulator Component Serial Number: N/A	8. Temperature Probe Component Serial Number: N/A

9. Reason for Service:
PLACED BACK INTO SERVICE

10. Comments:
PLACED BACK INTO SERVICE WITHOUT INCIDENT.

- 11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
- 12. The above Instrument/Component is placed out of service pending further evaluation.
- 13. The above Instrument/Component is placed back in service.

"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

TPR I. M. ARROYO #6291

Name & Badge Number (Print)


TPR I / M / 6291 10/29/2013
Signature Date

Dräger

Alcotest® 7110 MKIII-C

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 MKIII-C has been tested for accuracy and found to be in compliance with the National Highway Traffic Safety Administration Standard for evidential breath testing devices. The Alcotest MKIII-C is compliant as a "mobile" and "nonmobile" EBT with 49 FR 48854, 49 FR 48864 and 58 FR 48705. The manufacturer recommends accuracy verification of this instrument within 12 months of the calibration date below, or sooner, according to your State Specifications.

Certification Date:

SERIAL NUMBER:

10-3-13

ARWM-0092

Draeger Safety Diagnostics, Inc.

BC

RETURN AND REPAIR FORM



Customer Information

B:

S:

Company Name: TWP. of Verona, Verona, NJ

Date Received: 09/30/13

Date given to service: 09/30/13

Carrier: FedEx UPS USPS

Shipping Method: GRD 3DAY 2DAY
 NDA-PRI NDA-STD

Product: 6510 6810
 7110 8610
 7510 DT5000
 7410 Upper-half 9510
 7410 Whole

Serial Number: AR WM-0092

Printer Serial#: AR

Sim Serial#: DD

Probe Serial#: DD

Warranty Expires: December 2013

Description: A B Plus Demo Screener Trade In

Accessories

110V A/C Adapter Regulator Printer Ribbon Printer Paper
 Mouthpieces 9510 Stylus 9510 Top Cover Carrying Case
 Dry Gas Other (please specify) _____

Repair Information:

Test#:

Part Number	Description	Qty	Total Cost
MP Cal 71	Calibration	1	NC/W
MP Labor	Labor	8	NC/W
8315075	Alcotest 7110 Motherboard	1	NC/W

Repair Notes: Replaced defective motherboard due to corrupt memory error.

CAL W/QC AND OPS CHECK

Service Technician: BC

Date: 10/03/13

Packing Slip

Customer no Order No Order date
 150061090 10655201 10/03/2013

Packing slip no. Ship date
 80807676 10/03/2013

Please reference on inquiries

ship to

150061091
 VERONA TOWNSHIP POLICE DEPARTMENT
 ATTN: CHIEF DOUGLAS J. HUBER
 ESSEX COUNTY
 600 BLOOMFIELD AVENUE
 VERONA, NJ 07044
 USA

bill to

Your Purchase Order Number

7110: ARWM-0092
 Any questions? Please contact:
 AMANDA DILLEY

Your sales person

Don Pouliot
 Phone: 973-398-3228

Customer

TOWNSHIP OF VERONA
 ATTN: FINANCE DEPARTMENT
 ESSEX COUNTY
 600 BLOOMFIELD AVENUE
 VERONA, NJ 07044
 USA

Delivery terms

FA
 FREIGHT ALLOWED

Item#	sh. Quant.	Part no. Description
		Ship via: Fed Ex Ground
		NOTE: All claims for shortages/defects must be reported within 10 Business days after receipt of order. All returns must have our RMA# clearly marked on the box. Please call Customer Service at 866-385-5900.
		7110: ARWM-0092 REC'D ON 9-30-13
0010	1 EA	MPCAL71 CALIBRATION CHARGE - 7110/9510 Ordered / Back ordered : 0 / 0 EA
0020	1 EA	8315075 PCB,ALCOTEST 7110 MKII US VERSION Ordered / Back ordered : 0 / 0 EA

Draeger Safety Diagnostics Inc.
 Accounting Address:
 101 Technology Drive
 Pittsburgh, PA 15275
 Tel: (412) 788-5537
 Fax: (412) 788-5598

Remit Wire Transfers To:
 Citizens Bank
 Acct. # 6209426615
 Acct. Name: Draeger Safety Diagnostics Inc.
 Transit Number: 036076150
 Federal ID Number: 84-1600159

REMIT TO:
 Draeger Safety Diagnostics Inc.
 P.O. Box 200337
 Pittsburgh, PA 15251-0337

Packing Slip

Customer no Order No Order date
150061090 10655201 10/03/2013

Packing slip no. Ship date
80807676 10/03/2013

Please reference on inquiries

Page 2 / 2

Item#	sh. Quant.	Part no. Description			
0030	0.5 H	MPLABOR LABOR CHARGE Ordered / Back ordered : 0.0 / 0.0 H			

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: VERONA POLICE DEPARTMENT 600 BLOOMFIELD AVE. BLOOMFIELD NJ 07044		2. Contact: N/A	4. Date: 09-19-2013
		3. Phone Number: 973-857-4809	5. County: ESSEX COUNTY
6. Alcotest Instrument Serial Number: ARWM-0092	7. Simulator Component Serial Number: N/A	8. Temperature Probe Component Serial Number: N/A	

9. Reason for Service:
RECEIVED A COMPLAINT OF A CORRUPT MEMORY ERROR MESSAGE DISPLAYED DURING A TESTING SEQUENCE.

10. Comments:
UPON INSPECTION OF THE ALCOTEST, IT WAS DEEMED THAT A MOTHERBOARD FAILURE OCCURRED DURING THE TESTING PROCESS. UTILIZING THE BLACK KEY. THE MEMORY WAS REVIEWED TO BE AT 0%. A SEARCH OF THE DATABASE REVEALED THAT THE LAST DOWNLOAD WAS SOLUTION CHANGE SEQUENTIAL FILE NUMBER 00245. SOLUTION CHANGE 245 WAS PERFORMED ON 08-21-2013 AND WAS PART OF MY OWN RECALIBRATION OF THE INSTRUMENT. PLEASE EVALUATE MOTHERBOARD.

LAST KNOWN SEQUENTIAL FILE NUMBER: 00245

- 11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
- 12. The above Instrument/Component is placed out of service pending further evaluation.
- 13. The above Instrument/Component is placed back in service.

"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

TPR I. M. ARROYO 6291
Name & Badge Number (Print)

[Signature]
Signature

7/19/13
Date

FedEx Tracking Number **8013 9163 6189**

Form ID No. **0215**

SPH1

Sender's Copy

dom Please print and press hard.

to **9/25/13** Sender's FedEx Account Number **1104-436539**

sender's name **LT. M. Ruglio** Phone **(973) 239-5000**

company **TOWNSHIP OF VERONA**

address **600 BLOOMFIELD AVE**

Dept./Floor/Suite/Room

city **VERONA** State **N.J** ZIP **07044-1822**

our Internal Billing Reference

:24 characters will appear on invoice.

recipient's name **MARIA ERRERIA** Phone **(866) 385-5900**

company **DIAEGER SAFETY DIAGNOSTICS**

address **4040 W. ROYAL LANE SUITE 136**

cannot deliver to P.O. boxes or P.D. ZIP codes.

Dept./Floor/Suite/Room

address **IRVING** State **TX** ZIP **75063**

this line for the HOLD location address or for continuation of your shipping address.

HOLD Weekday
FedEx location address
REQUIRED. NOT applicable for FedEx First Overnight.

HOLD Saturday
FedEx location address
REQUIRED. Applicable ONLY for FedEx Priority Overnight and FedEx 2Day to select locations.

4 Express Package Service *To most locations.

NOTE: Service order has changed. Please select carefully.

Packages up to 150 lbs.
For packages over 150 lbs., use the new **FedEx Express Freight US Airbill.**

Next Business Day

FedEx First Overnight
Earliest next business morning delivery to select locations. Friday shipments will be delivered on Monday unless SATURDAY Delivery is selected.

FedEx Priority Overnight
Next business morning.* Friday shipments will be delivered on Monday unless SATURDAY Delivery is selected.

FedEx Standard Overnight
Next business afternoon.*
SATURDAY Delivery NOT available.

2 Day Business Days

FedEx 2Day A.M.
Second business morning.*
SATURDAY Delivery NOT available.

FedEx 2Day
Second business afternoon.* Thursday shipments will be delivered on Monday unless SATURDAY Delivery is selected.

FedEx Express Saver
Third business day.*
SATURDAY Delivery NOT available.

5 Packaging *Declared value limit \$500.

FedEx Envelope* **FedEx Pak*** **FedEx Box** **FedEx Tube** **Other**

6 Special Handling and Delivery Signature Options

SATURDAY Delivery
NOT available for FedEx Standard Overnight, FedEx 2Day A.M., or FedEx Express Saver.

No Signature Required
Package may be left without obtaining a signature for delivery.

Direct Signature
Someone at recipient's address may sign for delivery. **Fee applies.**

Indirect Signature
If no one is available at recipient's address, someone at a neighboring address may sign for delivery. For residential deliveries only. **Fee applies.**

Does this shipment contain dangerous goods?

One box: must be checked.

No **Yes** As per attached Shipper's Declaration. **Yes** Shipper's Declaration not required.

Dry Ice Dry Ice, 3, UN 1845 _____ x _____ kg

Dangerous goods (including dry ice) cannot be shipped in FedEx packaging or placed in a FedEx Express Drop Box.

Cargo Aircraft Only

7 Payment Bill to:

Enter FedEx Acct. No. or Credit Card No. below.

Sender Acct. No. in Section 1 will be billed. **Recipient** **Third Party** **Credit Card** **Cash/Check**

FedEx Acct. No. **241946304** Exp. Date

Total Packages **1** Total Weight **20** lbs. Total Declared Value* **\$** _____

*Our liability is limited to US\$100 unless you declare a higher value. See back for details. By using this Airbill you agree to the service conditions on the back of this Airbill and in the current FedEx Service Guide, including terms that limit our liability.

Rev. Date 2/12 • Part #163134 • ©1994-2012 FedEx • PRINTED IN U.S.A. SRS

611



Get transit times. Schedule pickups.
Create labels. Go to fedex.com

POSTAGE WILL BE PAID BY ADDRESSEE

Packing Slip

Customer no Order No Order date
 150061090 10655201 10/03/2013


Packing slip no. Ship date
 80807676 10/03/2013

Please reference on inquiries

ship to

150061091
 VERONA TOWNSHIP POLICE DEPARTMENT
 ATTN: CHIEF DOUGLAS J. HUBER
 ESSEX COUNTY
 600 BLOOMFIELD AVENUE
 VERONA, NJ 07044
 USA

bill to

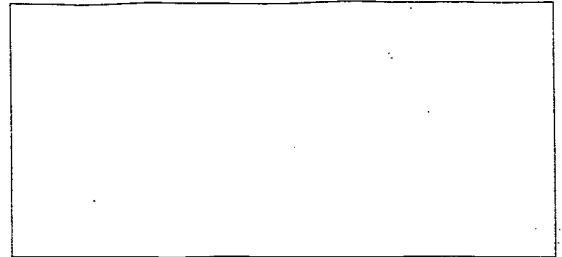

Your Purchase Order Number

7110: ARWM-0092
 Any questions? Please contact:
 AMANDA DILLEY

Your sales person

Don Pouliot
 Phone: 973-398-3228

Customer

TOWNSHIP OF VERONA
 ATTN: FINANCE DEPARTMENT
 ESSEX COUNTY
 600 BLOOMFIELD AVENUE
 VERONA, NJ 07044
 USA

Delivery terms

FA
 FREIGHT ALLOWED

Page 1 / 2

Item#	sh. Quant.	Part no. Description			
		Ship via: Fed Ex Ground			
		NOTE: All claims for shortages/defects must be reported within 10 Business days after receipt of order. All returns must have our RMA# clearly marked on the box. Please call Customer Service at 866-385-5900.			
		7110: ARWM-0092 REC'D ON 9-30-13			
0010	1 EA	MPCAL71 CALIBRATION CHARGE - 7110/9510 Ordered / Back ordered : 0 / 0 EA			
0020	1 EA	8315075 PCB,ALCOTEST 7110 MKII US VERSION Ordered / Back ordered : 0 / 0 EA			

Draeger Safety Diagnostics Inc.
 Accounting Address:
 101 Technology Drive
 Pittsburgh, PA 15275
 Tel: (412) 788-5537
 Fax: (412) 788-5598

Remit Wire Transfers To:
 Citizens Bank
 Acct. # 6209426615
 Acct. Name: Draeger Safety Diagnostics Inc.
 Transit Number: 036076150
 Federal ID Number: 84-1600159

REMIT TO:
 Draeger Safety Diagnostics Inc.
 P.O. Box 200337
 Pittsburgh, PA 15251-0337

Packing Slip

Customer no Order No Order date
150061090 10655201 10/03/2013

Packing slip no. Ship date
80807676 10/03/2013

Please reference on inquiries

Page 2 / 2

Item#	sh. Quant.	Part no. Description			
0030	0.5 H	MPLABOR LABOR CHARGE Ordered / Back ordered : 0.0 / 0.0 H			

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: VERONA POLICE DEPARTMENT 600 BLOOMFIELD AVE. BLOOMFIELD NJ 07044	2. Contact: N/A	4. Date: 09-19-2013
3. Phone Number: 973-857-4809		5. County: ESSEX COUNTY
6. Alcotest Instrument Serial Number: ARWM-0092	7. Simulator Component Serial Number: N/A	8. Temperature Probe Component Serial Number: N/A

9. Reason for Service:
RECEIVED A COMPLAINT OF A CORRUPT MEMORY ERROR MESSAGE DISPLAYED DURING A TESTING SEQUENCE.


10. Comments:
UPON INSPECTION OF THE ALCOTEST, IT WAS DEEMED THAT A MOTHERBOARD FAILURE OCCURRED DURING THE TESTING PROCESS. UTILIZING THE BLACK KEY. THE MEMORY WAS REVIEWED TO BE AT 0%. A SEARCH OF THE DATABASE REVEALED THAT THE LAST DOWNLOAD WAS SOLUTION CHANGE SEQUENTIAL FILE NUMBER 00245. SOLUTION CHANGE 245 WAS PERFORMED ON 08-21-2013 AND WAS PART OF MY OWN RECALIBRATION OF THE INSTRUMENT. PLEASE EVALUATE MOTHERBOARD.

LAST KNOWN SEQUENTIAL FILE NUMBER: 00245

- 11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
- 12. The above Instrument/Component is placed out of service pending further evaluation.
- 13. The above Instrument/Component is placed back in service.

"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

TPR I. M. ARROYO 6291
 Name & Badge Number (Print)

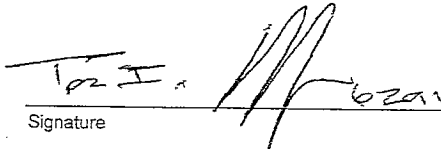
 Signature

9/19/13
 Date

FedEx Package Express
US Airbill

FedEx Tracking Number **8013 9163 6189**

1 From Please print and press hard. Sender's FedEx Account Number **SENDER'S FEDEx ACCOUNT NUMBER ONLY**

Date **9/25/13**

Sender's Name **L. M. Roglio** Phone **973, 239-5000**

Company **TOWNSHIP OF VERONA**

Address **600 BLOOMFIELD AVE**

City **VERONA** State **N.J.** ZIP **07044-1822**

2 Your Internal Billing Reference

First 2 characters will appear on invoice. **APT18A1**

3 To

Recipient's Name **MARIA ERREIRA** Phone **866, 385-5900**

Company **DIANEGER SAFETY DIAGNOSTICS**

Address **4040 W. ROYAL LANE SUITE 136**

City **IRVING** State **TX** ZIP **75063**

Address Use this line for the HOLD location address or for continuation of your shipping address.



SPH1
Sender's Mark

From ID No. **0215**

Express Package Service *To most locations.
 NOTE: Service order has changed. Please select carefully.

Packages up to 150 lbs.
 For packages over 150 lbs, use the new FedEx Express freight US Airbill.

4 FedEx First Overnight
 FedEx Priority Overnight
 FedEx Standard Overnight
 FedEx 2Day
 FedEx 2Day AM
 FedEx Express Saver

5 Packaging *Declared value limit \$500.
 FedEx Envelope*
 FedEx Pak*
 Box
 Tube
 Other

6 Special Handling and Delivery Signature Options
 No Signature Required
 Signature Required
 Signature Required - Restricted
 Signature Required - Restricted (Signature Required)

7 Payment Bill to:
 Sender
 Recipient
 Third Party
 Credit Card
 Cash/Check

Total Packages **1** Total Weight **20** lbs. **2** Total Declared Value* **611**

PULL AND RETAIN THIS COPY BEFORE AFFIXING TO THE PACKAGE. NO POUCH NEEDED.



Invoice

Dräger Safety Diagnostics, Inc

Customer no	Sales order no.	Delivery no	Ship date
150061090	10787069	80957539	06/26/2015

<u>Invoice no</u>	<u>Invoice date</u>
91127051	06/26/2015

Please reference on payment

Bill to
TOWNSHIP OF VERONA
ATTN: FINANCE DEPARTMENT
ESSEX COUNTY
600 BLOOMFIELD AVENUE
VERONA, NJ 07044-1822
USA

Payer

150061090 TOWNSHIP OF VERONA ATTN: FINANCE DEPARTMENT ESSEX COUNTY 600 BLOOMFIELD AVENUE VERONA, NJ 07044-1822 USA
--

Your Purchase Order Number

06/25/2015
P/O H. CARATTINI JR.

Ship to

150061091
VERONA TOWNSHIP POLICE DEPARTMENT
ATTN: P/O H. CARATTINI JR.
ESSEX COUNTY
600 BLOOMFIELD AVENUE
VERONA, NJ 07044-1822
USA

Your sales person

LINDA SALO
Phone: 866-385-5900
Fax: 972-929-1260

Delivery terms

FA
FREIGHT ALLOWED

Item#	Quant.	Part no. Description	Unit price		Extended amount
			USD	%	
		Ship via: Fed Ex Ground SIM:DDXAS3-0065, PROBE: DDWJP2-208 REC'D 6/17/15			
0010	1 EA	MPCERT CERTIFICATION CHARGE SIMULATOR	85.00		85.00
0020	1 EA	MPCALTP CAL CHARGE, SIM PROBE	45.00		45.00
0030	1 EA	12043 HOSE PUMP-SIM W/SIM-CUVETTE HOSE 2"	17.00		17.00
0040	1 EA	4540023 GASKET, SIM JAR, 4"ODX.139"WALL, #240			
0050	1 EA	FREIGHT Freight Charges	22.00		22.00

Draeger Safety Diagnostics Inc.
Accounting Address:
101 Technology Drive
Pittsburgh, PA 15275
Tel: (412) 788-5537
Fax: (412) 788-5598

Remit Wire Transfers To:
Citizens Bank
Acct. # 6209426615
Acct. Name: Draeger Safety Diagnostics Inc.
Transit Number: 036076150
Federal ID Number: 84-1600159

REMIT TO:
Draeger Safety Diagnostics Inc.
P.O. Box 536410
Pittsburgh, PA 15253-5906



Invoice

Dräger Safety Diagnostics, Inc

Customer no Sales order no. Delivery no Ship date
150061090 10787069 80957539 06/26/2015

Invoice no Invoice date
91127051 06/26/2015

Please reference on payment


Page 2 / 2

Item#	Quant.	Part no. Description	Unit price USD	%	Extended amount USD
		-----	-----	-----	-----
		Subtotal			169.00
		-----	-----	-----	-----
		Total			169.00
		=====	=====	=====	=====
<p>Terms of payment: Net 30 days</p>					
<p>NOTE: All claims for shortages/defects must be reported within 10 business days after receipt of order. All returns must have our RMA# clearly marked on the box. Please call Customer Service at 866-385-5900.</p>					

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: Verona Twp Police 600 Bloomfield Ave Verona NJ, 07044		2. Contact: Sgt J. Lecreux	4. Date: 2/22/16
		3. Phone Number: 973-239-5000	5. County: Essex
6. Alcotest Instrument Serial Number: ARWM-0092	7. Simulator Component Serial Number: N/A	8. Temperature Probe Component Serial Number: N/A	

9. Reason for Service:
The above Alcotest has been reported to have Control Test Failures for low EC readings.

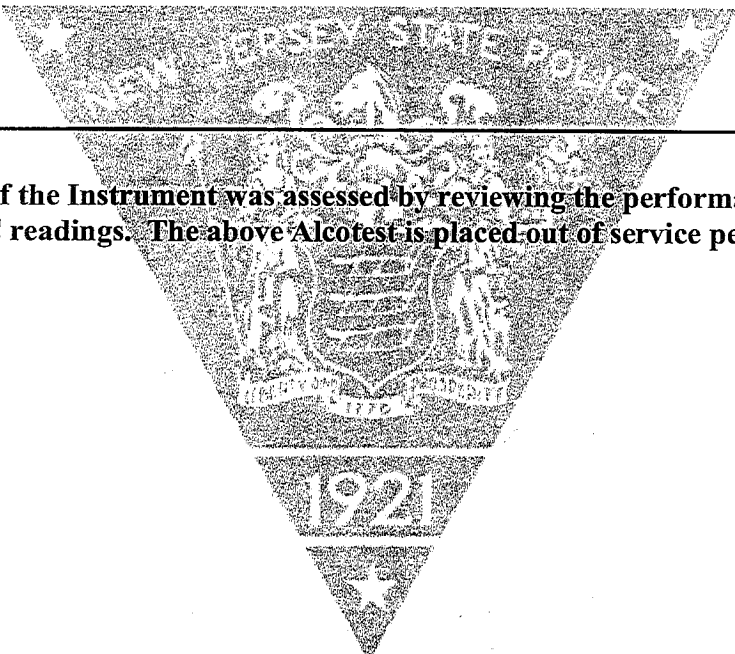

10. Comments:
Operational condition of the Instrument was assessed by reviewing the performance history. This revealed several low EC readings. The above Alcotest is placed out of service pending evaluation by Drager.

Last Known Sequential File #: 396

- 11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
- 12. The above Instrument/Component is placed out of service pending further evaluation.
- 13. The above Instrument/Component is placed back in service.

"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

Tpr I. J. Surowiec #6429
Name & Badge Number (Print)

Tpr I J Surowiec #6429 2/22/16
Signature Date

RETURN AND REPAIR FORM



Customer Information

B: _____ S: _____

Company Name: Verona P.D., VERona, NJ

Date Received: 02/29/2016

Date given to service: 02/29/2016

Carrier: FedEx UPS USPS Shipping Method: GRD 3DAY 2DAY
 NDA-PRI NDA-STD

Product: 6510 6810
 7110 8610
 7510 DT5000
 7410 Upper-half 9510
 7410 Whole

Serial Number: AR WM-0092

Printer Serial#: AR

Sim Serial#: DD

Probe Serial#: DD

Warranty Expires: December 2016 (61090)

Description: A B Plus Demo Screener Trade In

Accessories

110V A/C Adapter Regulator Printer Ribbon Printer Paper
 Mouthpieces 9510 Stylus 9510 Top Cover Carrying Case
 Dry Gas Other (please specify) _____

Repair Information:

Test#: _____

Part Number	Description	Qty	Total Cost
4414161	Calibration	1	NC/W
4414166	Labor	.5	NC/W
6808455	Fuel Cell	1	NC/W
6808486	Spacer Plates	2	NC/W

Repair Notes: Replaced defective fuel cell and spacer plates.

Fuel Cell = ARHM-0848

CAL W/QC AND OPS CHECK

Service Technician BC

Date: 03/14/2016

Packing Slip

Customer no Order No Order date
 150061090 10839653 03/14/2016

Packing slip no. Ship date
 81017374 03/14/2016

Please reference on inquiries

Ship to

150061091
 VERONA TOWNSHIP POLICE DEPARTMENT
 ATTN: CHIEF DOUGLAS J. HUBER
 ESSEX COUNTY
 600 BLOOMFIELD AVENUE
 VERONA, NJ 07044-1822
 USA

Payer

Your Purchase Order Number

P/O H. CARATTINI JR.
 Any questions? Please contact:
 ROSEMARIE HUGHES

Customer

TOWNSHIP OF VERONA
 ATTN: FINANCE DEPARTMENT
 ESSEX COUNTY
 600 BLOOMFIELD AVENUE
 VERONA, NJ 07044-1822
 USA

Your sales person

CHRISTOPHER FAIRCHILD
 Phone: 866-385-5900
 Fax: 972-929-1260

Delivery terms

FA
 FREIGHT ALLOWED

Item#	sh. Quant.	Part no. Description			
		Ship via: Fed Ex Saver			
		NOTE: All claims for shortages/defects must be reported within 10 Business days after receipt of order. All returns must have our RMA# clearly marked on the box. Please call Customer Service at 866-385-5900.			
		7110:ARWM-0092 REC'D 2/29/16			
0010	1 EA	4414161 CALIBRATION, 7110 Ordered / Back ordered : 0 / 0 EA			
0020	0.5 EA	4414166 HOURLY LABOR CHARGE Ordered / Back ordered : 0.0 / 0.0 EA			

Draeger Safety Diagnostics Inc.
 Accounting Address:
 101 Technology Drive
 Pittsburgh, PA 15275
 Tel: (412) 788-5537
 Fax: (412) 788-5598

Remit Wire Transfers To:
 Citizens Bank
 Acct. # 6209426615
 Acct. Name: Draeger Safety Diagnostics Inc.
 Transit Number: 036076150
 Federal ID Number: 84-1600159

REMIT TO:
 Draeger Safety Diagnostics Inc.
 P.O. Box 536410
 Pittsburgh, PA 15253-5906

Packing Slip

Customer no Order No Order date
150061090 10839653 03/14/2016

Packing slip no. Ship date
81017374 03/14/2016

Please reference on inquiries

Page 2 / 2

Item#	sh. Quant.	Part no. Description			
0030	1 EA	6808455 SENSOR : FUEL CELL Ordered / Back ordered : 0 / 0 EA			
0040	2 EA	6808486 PLATES,7110--9510 Ordered / Back ordered : 0 / 0 EA			

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: Verona Twp Police 600 Bloomfield Ave Verona NJ, 07044	2. Contact: Sgt J. Lecreux	4. Date: 4/5/16
	3. Phone Number: 973-239-5000	5. County: Essex

6. Alcotest Instrument Serial Number: <p style="text-align: center;">ARWM-0092</p>	7. Simulator Component Serial Number: <p style="text-align: center;">N/A</p>	8. Temperature Probe Component Serial Number: <p style="text-align: center;">N/A</p>
--	--	--

9. Reason for Service:
Alcotest instrument returned from outside evaluation and placed back into service.

10. Comments:
Drager Safety Return & Repair Form indicates a Replaced defective fuel cell and spacer plates.
Alcotest instrument was recalibrated and found to be in proper working order.

Last Known Sequential File #: N/A

- 11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
- 12. The above Instrument/Component is placed out of service pending further evaluation.
- 13. The above Instrument/Component is placed back in service.

"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

<p style="text-align: center;">Tpr I. J. Surowiec #6429 Name & Badge Number (Print)</p>	 Signature	<p style="text-align: right;">#6429 4/5/16 Date</p>
---	---	---

Packing Slip

Customer no Order No Order date
 150061090 10853219 08/15/2016

Packing slip no. **Ship date**
 81030531 08/15/2016
 Please reference on inquiries

Ship to
 150061091
 VERONA TOWNSHIP POLICE DEPARTMENT
 ATTN: CHIEF DOUGLAS J. HUBER
 ESSEX COUNTY
 600 BLOOMFIELD AVENUE
 VERONA, NJ 07044-1822
 USA

Payer

Your Purchase Order Number
 08/15/2016
 P/O H. CARATTINI JR.
 Any questions? Please contact:
 ROSEMARIE HUGHES

Customer
 TOWNSHIP OF VERONA
 ATTN: FINANCE DEPARTMENT
 ESSEX COUNTY
 600 BLOOMFIELD AVENUE
 VERONA, NJ 07044-1822
 USA

Your sales person
 CHRISTOPHER FAIRCHILD
 Phone: 866-385-5900
 Fax: 972-929-1260

Delivery terms
 FA
 FREIGHT ALLOWED

Item#	sh. Quant.	Part no. Description			
		Ship via: Fed Ex Ground			
		NOTE: All claims for shortages/defects must be reported within 10 Business days after receipt of order. All returns must have our RMA# clearly marked on the box. Please call Customer Service at 866-385-5900.			
		SIM:DDXAS3-0065, PROBE:DDWJP2-208 REC'D 8/4/16			
0010	1 EA	MPCERT CERTIFICATION CHARGE SIMULATOR Ordered / Back ordered : 1 / 0 EA			
0020	1 EA	MPCALTP CAL CHARGE, SIM PROBE Ordered / Back ordered : 1 / 0 EA			

Draeger Safety Diagnostics Inc.
 Accounting Address:
 101 Technology Drive
 Pittsburgh, PA 15275
 Tel: (412) 788-5537
 Fax: (412) 788-5598

Remit Wire Transfers To:
 Citizens Bank
 Acct. # 6209426615
 Acct. Name: Draeger Safety Diagnostics Inc.
 Transit Number: 036076150
 Federal ID Number: 84-1600159

REMIT TO:
 Draeger Safety Diagnostics Inc.
 P.O. Box 536410
 Pittsburgh, PA 15253-5906

Packing Slip

Customer no Order No Order date
150061090 10853219 08/15/2016

Packing slip no. Ship date
81030531 08/15/2016

Please reference on inquiries

Page 2 / 2

Item#	sh. Quant.	Part no. Description			
0030	1 EA	12043 HOSE PUMP-SIM W/SIM-CUVETTE HOSE 2" Ordered / Back ordered : 1 / 0 EA			
0040	1 EA	4540023 GASKET, SIM JAR, 4"ODX.139"WALL, #240 Ordered / Back ordered : 1 / 0 EA			
0050	1 EA	FREIGHT Freight Charges Ordered / Back ordered : 1 / 0 EA			

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: VERONA POLICE DEPARTMENT 600 BLOOMFIELD AVE. BLOOMFIELD NJ 07044	2. Contact: N/A	4. Date: 09-19-2013
	3. Phone Number: 973-857-4809	5. County: ESSEX COUNTY
6. Alcotest Instrument Serial Number: ARWM-0092	7. Simulator Component Serial Number: N/A	8. Temperature Probe Component Serial Number: N/A


9. Reason for Service:
RECEIVED A COMPLAINT OF A CORRUPT MEMORY ERROR MESSAGE DISPLAYED DURING A TESTING SEQUENCE.

10. Comments:
UPON INSPECTION OF THE ALCOTEST, IT WAS DEEMED THAT A MOTHERBOARD FAILURE OCCURRED DURING THE TESTING PROCESS. UTILIZING THE BLACK KEY. THE MEMORY WAS REVIEWED TO BE AT 0%. A SEARCH OF THE DATABASE REVEALED THAT THE LAST DOWNLOAD WAS SOLUTION CHANGE SEQUENTIAL FILE NUMBER 00245. SOLUTION CHANGE 245 WAS PERFORMED ON 08-21-2013 AND WAS PART OF MY OWN RECALIBRATION OF THE INSTRUMENT. PLEASE EVALUATE MOTHERBOARD.

LAST KNOWN SEQUENTIAL FILE NUMBER: 00245

- 11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
- 12. The above Instrument/Component is placed out of service pending further evaluation.
- 13. The above Instrument/Component is placed back in service.


"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

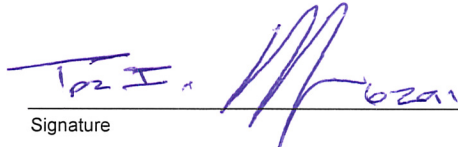TPR I. M. ARROYO 6291 Name & Badge Number (Print)	 Signature	9/19/13 Date
---	---	------------------------

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: Verona Twp Police 600 Bloomfield Ave Verona NJ, 07044	2. Contact: Sgt J. Lecreux 3. Phone Number: 973-239-5000	4. Date: 2/22/16 5. County: Essex
6. Alcotest Instrument Serial Number: <p style="text-align: center;">ARWM-0092</p>	7. Simulator Component Serial Number: <p style="text-align: center;">N/A</p>	8. Temperature Probe Component Serial Number: <p style="text-align: center;">N/A</p>

9. Reason for Service:
The above Alcotest has been reported to have Control Test Failures for low EC readings.

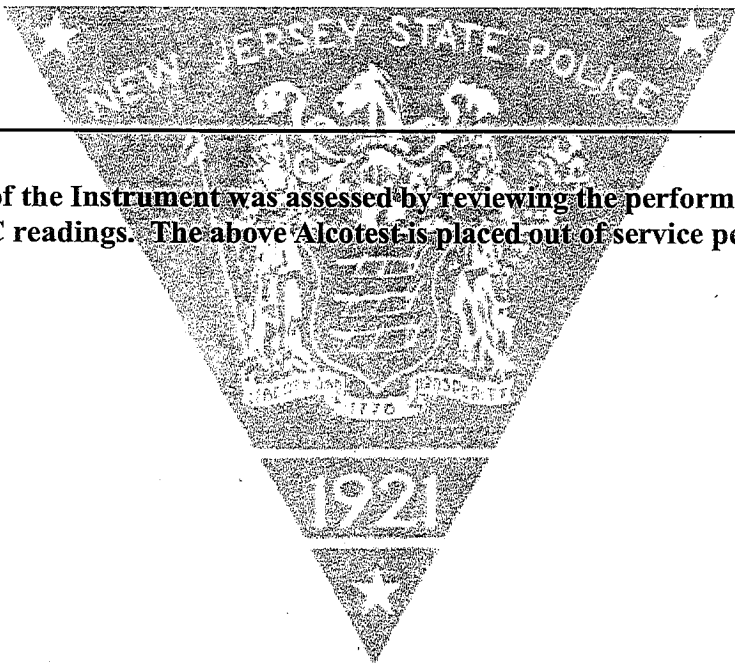

10. Comments:
Operational condition of the Instrument was assessed by reviewing the performance history. This revealed several low EC readings. The above Alcotest is placed out of service pending evaluation by Drager.

Last Known Sequential File #: 396

- 11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
- 12. The above Instrument/Component is placed out of service pending further evaluation.
- 13. The above Instrument/Component is placed back in service.

"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

Tpr I. J. Surowiec #6429 <small>Name & Badge Number (Print)</small>	 <small>Signature</small>	#6429 2/22/16 <small>Date</small>
--	------------------------------	--------------------------------------

RETURN AND REPAIR FORM



Customer Information

B:

S:

Company Name: Verona P.D., VErona, NJ

Date Received: 02/29/2016

Date given to service: 02/29/2016

Carrier: FedEx UPS USPS Shipping Method: GRD 3DAY 2DAY
 NDA-PRI NDA-STD

Product: 6510 6810
 7110 8610
 7510 DT5000
 7410 Upper-half 9510
 7410 Whole

Serial Number: AR WM-0092

Printer Serial#: AR

Sim Serial#: DD

Probe Serial#: DD

Warranty Expires: December 2016 (61090)

Description: A B Plus Demo Screener Trade In

Accessories

110V A/C Adapter Regulator Printer Ribbon Printer Paper
 Mouthpieces 9510 Stylus 9510 Top Cover Carrying Case
 Dry Gas Other (please specify) _____

Repair Information:

Test#:

Part Number	Description	Qty	Total Cost
4414161	Calibration	1	NC/W
4414166	Labor	.5	NC/W
6808455	Fuel Cell	1	NC/W
6808486	Spacer Plates	2	NC/W

Repair Notes: Replaced defective fuel cell and spacer plates.

Fuel Cell = ARHM-0848

CAL W/QC AND OPS CHECK

Service Technician BC

Date: 03/14/2016

Dräger

Alcotest® 7110 MKIII-C

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 MKIII-C has been tested for accuracy and found to be in compliance with the National Highway Traffic Safety Administration Standard for evidential breath testing devices. The Alcotest MKIII-C is compliant as a "mobile" and "nonmobile" EBT with 49 FR 48854, 49 FR 48864 and 58 FR 48705. The manufacturer recommends accuracy verification of this instrument within 12 months of the calibration date below, or sooner, according to your State Specifications.

Certification Date:

3-14-16

SERIAL NUMBER:

ARWM-0092

Draeger Safety Diagnostics, Inc.

BC

Packing Slip

Customer no Order No Order date
 150061090 10839653 03/14/2016

Packing slip no. Ship date
 81017374 03/14/2016

Please reference on inquiries

Ship to

150061091
 VERONA TOWNSHIP POLICE DEPARTMENT
 ATTN: CHIEF DOUGLAS J. HUBER
 ESSEX COUNTY
 600 BLOOMFIELD AVENUE
 VERONA, NJ 07044-1822
 USA

Payer

Your Purchase Order Number

P/O H. CARATTINI JR.
 Any questions? Please contact:
 ROSEMARIE HUGHES

Customer

TOWNSHIP OF VERONA
 ATTN: FINANCE DEPARTMENT
 ESSEX COUNTY
 600 BLOOMFIELD AVENUE
 VERONA, NJ 07044-1822
 USA

Your sales person

CHRISTOPHER FAIRCHILD
 Phone: 866-385-5900
 Fax: 972-929-1260

Delivery terms

FA
 FREIGHT ALLOWED

Page 1 / 2

Item#	sh. Quant.	Part no. Description			
		Ship via: Fed Ex Saver			
		NOTE: All claims for shortages/defects must be reported within 10 Business days after receipt of order. All returns must have our RMA# clearly marked on the box. Please call Customer Service at 866-385-5900.			
		7110:ARWM-0092 REC'D 2/29/16			
0010	1 EA	4414161 CALIBRATION, 7110 Ordered / Back ordered : 0 / 0 EA			
0020	0.5 EA	4414166 HOURLY LABOR CHARGE Ordered / Back ordered : 0.0 / 0.0 EA			

Draeger Safety Diagnostics Inc.
 Accounting Address:
 101 Technology Drive
 Pittsburgh, PA 15275
 Tel: (412) 788-5537
 Fax: (412) 788-5598

Remit Wire Transfers To:
 Citizens Bank
 Acct. # 6209426615
 Acct. Name: Draeger Safety Diagnostics Inc.
 Transit Number: 036076150
 Federal ID Number: 84-1600159

REMIT TO:
 Draeger Safety Diagnostics Inc.
 P.O. Box 536410
 Pittsburgh, PA 15253-5906

Packing Slip

Customer no Order No Order date
150061090 10839653 03/14/2016

Packing slip no. Ship date
81017374 03/14/2016

Please reference on inquiries

Page 2 / 2

Item#	sh. Quant.	Part no. Description			
0030	1 EA	6808455 SENSOR : FUEL CELL Ordered / Back ordered : 0 / 0 EA			
0040	2 EA	6808486 PLATES,7110--9510 Ordered / Back ordered : 0 / 0 EA			

Alcotest 7110 Calibration Record

Equipment Alcotest 7110 MKIII-C Serial No.: ARWM-0092
Location: VERONA POLICE DEPT.
Calibration File No.: 00399 Calib. Date: 04/05/2016 Calib. No.: 00027
Certification File No.: 00363 Cert. Date: 08/25/2015 Cert. No.: 00017
Linearity File No.: 00364 Lin. Date: 08/25/2015 Lin. No.: 00017
Solution File No.: 00398 Soln. Date: 03/14/2016 Soln. No.: 00132
Sequential File No.: 00399 File Date: 04/05/2016


Calibrating Unit: WET Model No.: CU-34 Serial No.: DDXA S3-0068
Control Solution %: 0.100% Expires: 09/11/2017
Solution Control Lot: 151148 Bottle No.: 0203

Coordinator

Last Name: SUROWIEC First Name: JOHN MI: -
Signature: *[Signature]* #6429 Badge No.: 6429
Date: 04/05/2016

*Black Key Temperature Probe Serial.....# DDHH P2 - 077 (JS)

*Digital NIST Temperature Measuring System Serial.....# 150 649 671 (JS)

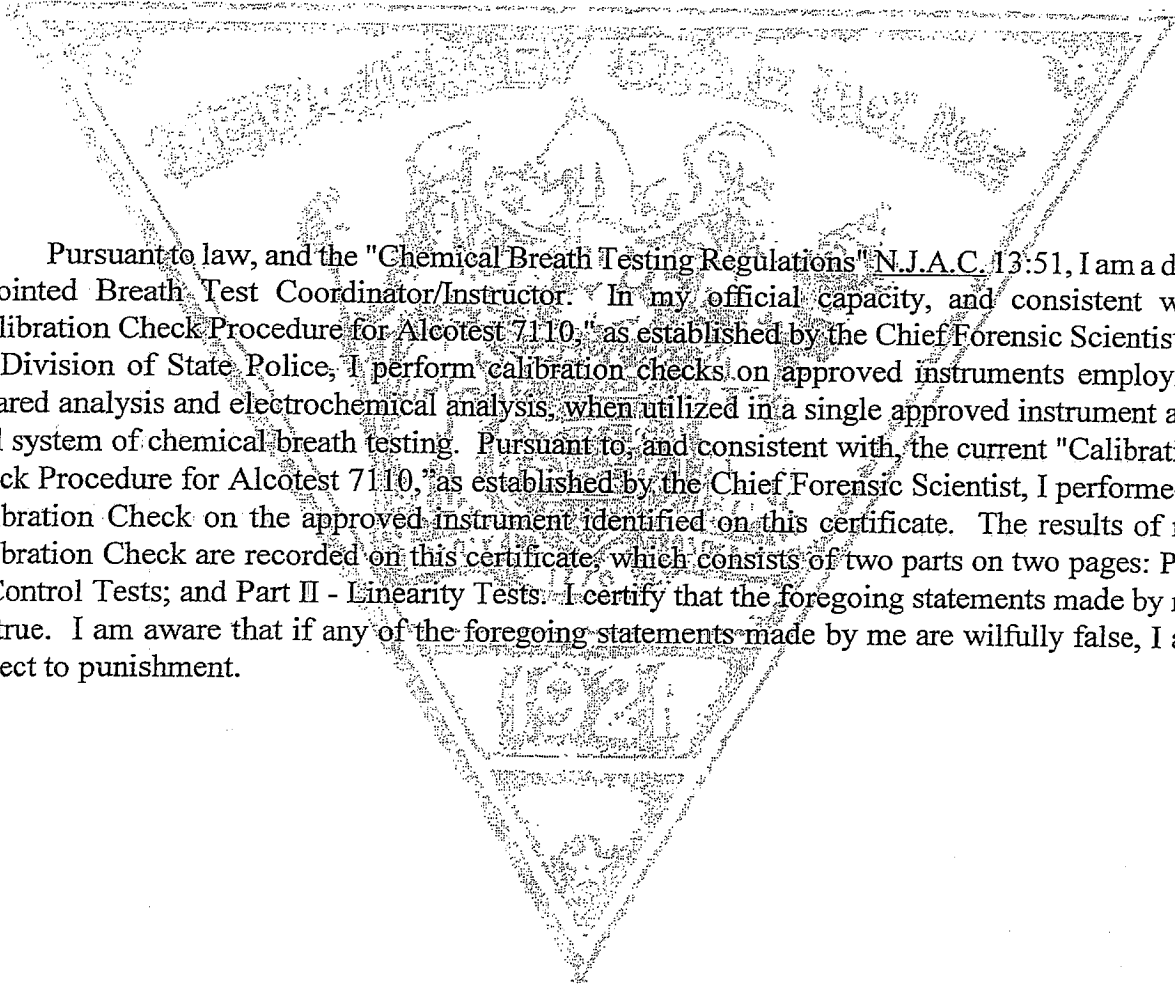

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part I - Control Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARWM-0092
Location: VERONA POLICE DEPT.
Calibration File No.: 00399 Calib. Date: 04/05/2016 Calib. No.: 00027
Certification File No.: 00400 Cert. Date: 04/05/2016 Cert. No.: 00018
Linearity File No.: 00364 Lin. Date: 08/25/2015 Lin. No.: 00017
Solution File No.: 00398 Soln. Date: 03/14/2016 Soln. No.: 00132
Sequential File No.: 00400 File Date: 04/05/2016

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDXA S3-0068
Control Solution %: 0.100% Expires: 09/11/2017
Solution Control Lot: 15I148 Bottle No.: 0203

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	13:05D		
Control 1 EC	0.099%	13:05D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.100%	13:05D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:06D		
Control 2 EC	0.099%	13:06D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.100%	13:06D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:07D		
Control 3 EC	0.100%	13:07D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.101%	13:07D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:08D		


All tests within acceptable tolerance.

Coordinator

Last Name: SUROWIEC

First Name: JOHN

MI: -

Signature: 

Badge No.: 6429

Date: 04/05/2016

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part II - Linearity Tests

Equipment Alcotest 7110 MKIII-C Serial No.: ARWM-0092
Location: VERONA POLICE DEPT.
Calibration File No.: 00399 Calib. Date: 04/05/2016 Calib. No.: 00027
Certification File No.: 00400 Cert. Date: 04/05/2016 Cert. No.: 00018
Linearity File No.: 00401 Lin. Date: 04/05/2016 Lin. No.: 00018
Solution File No.: 00398 Soln. Date: 03/14/2016 Soln. No.: 00132
Sequential File No.: 00401 File Date: 04/05/2016

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDWE S3-0202
Control Solution %: 0.040% Expires: 08/11/2017
Solution Control Lot: 15H141 Bottle No.: 1134

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDWE S3-0210
Control Solution %: 0.080% Expires: 08/13/2017
Solution Control Lot: 15H142 Bottle No.: 0389

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDWE S3-0211
Control Solution %: 0.160% Expires: 08/19/2017
Solution Control Lot: 15H144 Bottle No.: 0283

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	13:27D		
Control 1 EC	0.039%	13:28D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.039%	13:28D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:29D		
Control 2 EC	0.040%	13:30D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.038%	13:30D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:31D		
Control 3 EC	0.079%	13:32D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.077%	13:32D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:33D		
Control 4 EC	0.079%	13:34D	34.0°C	*** TEST PASSED ***
Control 4 IR	0.077%	13:34D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:35D		
Control 5 EC	0.157%	13:36D	34.0°C	*** TEST PASSED ***
Control 5 IR	0.153%	13:36D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:37D		
Control 6 EC	0.159%	13:38D	34.0°C	*** TEST PASSED ***
Control 6 IR	0.158%	13:38D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	13:39D		


All tests within acceptable tolerance.

Coordinator

Last Name: SUROWIEC

First Name: JOHN

MI: -

Signature:  #6429

Badge No.: 6429

Date: 04/05/2016

Calibrating Unit New Standard Solution Report

Equipment	Alcotest 7110 MKIII-C	Serial No.:	ARWM-0092
Location:	VERONA POLICE DEPT.		
Calibration File No.:	00399	Calib. Date:	04/05/2016
Certification File No.:	00400	Calib. No.:	00027
Linearity File No.:	00401	Cert. Date:	04/05/2016
Solution File No.:	00402	Cert. No.:	00018
Sequential File No.:	00402	Lin. Date:	04/05/2016
		Lin. No.:	00018
		Soln. Date:	04/05/2016
		Soln. No.:	00133
		File Date:	04/05/2016
Calibrating Unit:	WET	Model No.:	CU-34
Control Solution %:	0.100%	Serial No.:	DDXA S3-0068
Solution Control Lot:	15B137	Expires:	02/11/2017
		Bottle No.:	1083

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	14:45D		
Control 1 EC	0.100%	14:46D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.099%	14:46D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:46D		
Control 2 EC	0.100%	14:47D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.100%	14:47D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:48D		
Control 3 EC	0.100%	14:48D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.100%	14:48D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	14:49D		

All tests within acceptable tolerance.

On this date, I installed the above indicated "NEW SOLUTION" in accordance with Alcotest 7110 operator training and procedures established by the (NJSP) Chief Forensic Scientist.

Temperature Probe Serial Number: DDWT P2-210 (JS)

Changed By:

Last Name: SUROWIEC

First Name: JOHN

MI: -

Signature:  #6419

Badge No.: 6429

Date: 04/05/2016



Calibration complies with ISO/IEC
17025, ANSI/NCSL Z540-1, and 9001



Cert. No.: 4000-7019761

Traceable® Certificate of Calibration for Digital Thermometer

Manufactured for and distributed by: VWR International, LLC, Radnor Corporate Center, Bldg 1, Ste 200, 100 Matsonford Road Radnor, PA 19087

Instrument Identification:

Model: 64220-601 S/N: 150649671 Manufacturer: Control Company

Standards/Equipment:

Description	Serial Number	Due Date	NIST Traceable Reference
Temperature Calibration Bath TC-256	B01375		
Temperature Probe	128	4/02/16	15-A0P2S-40-1
Thermistor Module	A17118	3/03/16	1000371058
Temperature Calibration Bath TC-179	A45240		
Thermistor Module	A17118	3/03/16	1000371058
Temperature Probe	3039	4/02/16	15-A0P2S-20-1
Temperature Calibration Bath TC-231	A79341		
Thermistor Module	A27129	11/04/15	1000365407
Temperature Probe	5202	11/15/16	6-CV9Y2-1-1
Temperature Calibration Bath TC-309	B3A444		
Thermistor Module	A27129	11/04/15	1000365407
Temperature Probe	5267	11/19/16	6-CV9Y0-1-1

Certificate Information:

Technician: 88 Procedure: CAL-06 Cal Date: 8/31/15 Due Date: 8/31/17
 Test Conditions: 23.0°C 47.0 %RH 1017 mBar

Calibration Data: (New Instrument)

Unit(s)	Nominal	As Found	In Tol	Nominal	As Left	In Tol	Min	Max	±U	TUR
°C		N.A.		0.001	0.000	Y	-0.049	0.051	0.013	3.8:1
°C		N.A.		25.000	24.999	Y	24.950	25.050	0.014	3.6:1
°C		N.A.		50.004	50.000	Y	49.954	50.054	0.014	3.6:1
°C		N.A.		100.002	100.003	Y	99.952	100.052	0.014	3.6:1

This instrument was calibrated using instruments traceable to National Institute of Standards and Technology.

A Test Uncertainty Ratio of at least 4:1 is maintained unless otherwise stated and is calculated using the expanded measurement uncertainty. Uncertainty evaluation includes the instrument uncertainty and is calculated in accordance with the ISO Guide to the Expression of Uncertainty in Measurement (GUM). The uncertainty represents an expanded uncertainty using a coverage factor k=2 to approximate a 95% confidence level. In certain conditions are based on test results falling within specified limits with no reduction by the uncertainty of the measurement. The results contained herein are only for the items calibrated. This certificate shall not be reproduced except in full, without written approval of Control Company.

Nominal=Standard's Reading; As Left=Instrument's Reading; In Tol=In Tolerance; Min-Max=Acceptance Range; ±U=Expanded Measurement Uncertainty; TUR=Test Uncertainty Ratio; Accuracy=±Max-Min/2; Min - As Left (Nominal/Rounded) - Tolerances; Max = As Left (Nominal/Rounded) + Tolerances; Date=MM/DD/YYYY

Nico Rodriguez
Nico Rodriguez, Quality Manager

Arion Justice
Arion Justice, Technical Manager

Maintaining Accuracy:

In our opinion once calibrated your Digital Thermometer should maintain its accuracy. There is no easy way to determine how long calibration will be maintained. Digital Thermometers change little if any at all but can be affected by aging, temperature, shock and contamination.

Recalibration:

For factory calibration and re-calibration traceable to National Institute of Standards and Technology contact Control Company

CONTROL COMPANY 4455 Rex Road Friendswood, TX 77546 USA
 Phone 281 482-1714 Fax 281 482-9446 service@control3.com www.control3.com

Control Company is an ISO 17025:2005 Certified Calibration Laboratory Accredited by (A2LA) American Association of Laboratory Accredited and Certified No. 1750.01.
 Control Company is ISO 9001:2008 Quality Certified by (DNV) Det Norske Veritas, Certificate No. CERT-01828-2008-AM-HQ-J-Rev.
 International Laboratory Accreditation Cooperation (ILAC) - Multilateral Recognition Arrangement (MRA).

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: Verona Twp Police 600 Bloomfield Ave Verona NJ, 07044		2. Contact: Sgt J. Lecreux	4. Date: 4/5/16
		3. Phone Number: 973-239-5000	5. County: Essex
6. Alcotest Instrument Serial Number: ARWM-0092	7. Simulator Component Serial Number: N/A	8. Temperature Probe Component Serial Number: N/A	

9. Reason for Service:
Alcotest instrument returned from outside evaluation and placed back into service.

10. Comments:
Drager Safety Return & Repair Form indicates a Replaced defective fuel cell and spacer plates.

Alcotest instrument was recalibrated and found to be in proper working order.

Last Known Sequential File #: N/A

- 11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
- 12. The above Instrument/Component is placed out of service pending further evaluation.
- 13. The above Instrument/Component is placed back in service.

"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

Tpr I. J. Surowiec #6429
Name & Badge Number (Print)

Tpr I. J. Surowiec #6429
Signature

4/5/16
Date

V30257



Invoice

Dräger Safety Diagnostics, Inc

Customer no 150061090 Sales order no 10456680 Delivery no 80577876 Ship date 02/08/2011

Invoice no 90639829 Invoice date 02/08/2011

Please reference on payment

Bill to
TOWNSHIP OF VERONA
ATTN: FINANCE DEPARTMENT
ESSEX COUNTY
600 BLOOMFIELD AVENUE
VERONA, NJ 07044
USA

Customer
150061090
TOWNSHIP OF VERONA
ATTN: FINANCE DEPARTMENT
ESSEX COUNTY
600 BLOOMFIELD AVENUE
VERONA, NJ 07044
USA

Your Purchase Order Number
02/08/2011
30257

Ship to
150061091
VERONA TOWNSHIP POLICE DEPARTMENT
ATTN: CHIEF DOUGLAS J. HUBER
ESSEX COUNTY
600 BLOOMFIELD AVENUE
VERONA, NJ 07044
USA

Your sales person
Don Pouliot
Phone: 973-398-3228

Delivery terms
FA
FREIGHT ALLOWED

Item#	Quant.	Part no. Description	Unit price USD	%	Extended amount USD
		Ship via: Fed Ex Saver 7110: ARWM-0092			
0010	1 EA	6809514 BREATH HOSE, 7110 2ND GEN	409.50		409.50
0020	1 EA	MPCAL71 CALIBRATION CHARGE - 7110/9510	120.00		120.00
0030	0.5 H	MPLABOR LABOR CHARGE	88.00		44.00
0040	1 EA	FREIGHT Freight Charges to ship to Client	30.00		30.00
0050	1 EA	FREIGHT Freight Charges to ship to Draeger	30.00		30.00

Draeger Safety Diagnostics Inc.
Accounting Address:
101 Technology Drive
Pittsburgh, PA 15275
Tel: (412) 788-5537
Fax: (412) 788-5598

Remit Wire Transfers To:
Citizens Bank
Acct. # 6209426615
Acct. Name: Draeger Safety Diagnostics Inc.
Transit Number: 036076150
Federal ID Number: 84-1600159

REMIT TO:
Draeger Safety Diagnostics Inc.
P.O. Box 200337
Pittsburgh, PA 15251-0337

USA0208

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: Verona Twp. Police Dept. 600 Bloomfield Ave. Verona, NJ 07044	2. Contact: E. Carattini	4. Date: 2/06/2020
	3. Phone Number: (973) 239-5000	5. County: Essex

6. Alcotest Instrument Serial Number: ARWM-0092	7. Simulator Component Serial Number: N/A	8. Temperature Probe Component Serial Number: N/A
---	---	---

9. Reason for Service:
Complaint received that the above Alcotest had multiple control test failures.

10. Comments:
Operational condition of the instrument was assessed by reviewing the performance history of the instrument. This revealed low EC results on control tests.

The above instrument is placed out of service pending evaluation by Draeger Inc.

Last Known Sequential File #: 00676

- 11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
- 12. The above Instrument/Component is placed out of service pending further evaluation.
- 13. The above Instrument/Component is placed back in service.

"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

<p><i>Sgt. Christopher C. Mulch # 6806</i> Name & Badge Number (Print)</p>	<p><i>Sgt. [Signature] # 6806</i> Signature</p> <p style="text-align: right;">Date <i>2/6/20</i></p>
---	---

Service Notification Request

Date: February 10, 2020		Purchase Order Number if required by your company for payment	
Bill to Attn: Christopher Kiernan, Chief of Police		Ship to Attn: P/O H. Carattini Jr.	
Bill to Company Name: Verona Police Department		Ship to Company Name: Verona Police Department	
Bill to Company Address: 600 Bloomfield Avenue		Ship to Company Address: 600 Bloomfield Avenue	
City, State, Zip Code: Verona, NJ 07044		City, State, Zip Code: Verona, NJ 07044	
Phone: 973-239-5000	Email: christopher.kiernan@veronapolice.org	Phone: 973-239-5000	Email: heriberto.carattini@veronapolice.org

Please give a short description of any problem(s) you are having with your equipment:

Numerous Control Test Failures Since September 2019

Model # for items being returned:	Serial # for items being returned
<u>Alcotest 7110 MKIII-C</u>	<u>ARWM-0092</u>
_____	_____
_____	_____
_____	_____

Reason for device return:

- Calibration
- Repair
- Urgent pre-approved (extra charge)
- Trade In

PLEASE COMPLETE AND RETURN THIS FORM TO DSDIORDERS@DRAEGER.COM PRIOR TO RETURNING YOUR EQUIPMENT SO THAT WE CAN PROVIDE YOU WITH A SERVICE NOTIFICATION NUMBER. **THE SERVICE NOTIFICATION NUMBER MUST BE MARKED ON THE OUTSIDE OF THE BOX AND THE SERVICE NOTIFICATION FORM MUST BE INCLUDED. INSTRUMENTS RECEIVED WITHOUT A SERVICE NOTIFICATION NUMBER WILL BE REFUSED AND RETURNED AT YOUR EXPENSE.**

IF YOU ARE SENDING IN A DEVICE FOR SERVICING THAT DOES NOT HAVE AN EXTENDED WARRANTY, WE WILL PAY THE RETURN FREIGHT ONLY. IF YOUR DEVICE HAS AN EXTENDED WARRANTY, WE WILL COVER ALL SHIPPING COSTS.

THANK YOU,
DRAEGER SALES SUPPORT TEAM
DSDIORDERS@DRAEGER.COM

SHIP TO:
Draeger Inc.
1221 South Beltline Road, Suite 700
Coppell, Texas 75019
DO NOT SHIP DRY GAS!!

Acknowledgement



Customer no.
150061090

Number of report
304948917

Date of receiving
- -

Please reference on inquiries

Customer
TOWNSHIP OF VERONA
ATTN: CHIEF CHRISTOPHER KIERNAN
PO#ARWM-0092
600 BLOOMFIELD AVE
VERONA NJ 07044-1822
USA

Consignee
VERONA TOWNSHIP POLICE DEPARTMENT
ATTN: CHIEF CHRISTOPHER KIERNAN
PO#ARWM-0092
600 BLOOMFIELD AVE
VERONA NJ 07044-1822
USA

Your order

Date of order
02-18-2020
Purch. ord. no.
ARWM-0092

Branch text

Your contact person

FREDRICKA JOHNSON
800-437-2437 OPT 5
CS-IDT@draeger.com

Page 1

Item	Quantity	Description	Part-No.	Equipment-No.	Serial-No.
10		ALCOTEST 7110 MK III USA	8314246	1030158976	ARWM-0092
		REPAIR/ARWM-0092			

Date of delivery (CW/YY): 08/20

Draeger Inc.
Our Tax ID: 23-1699096
3135 Quarry Road, Telford, PA 18969
An Equal Opportunity Employer M / F / V / H
Telephone 800-437-2437
<http://www.draeger.com>

Remit to:
LOCKBOX (Standard USPS)
Draeger, Inc.
PO Box 13369
Newark, New Jersey
07101-3362

Remit to:
LOCKBOX (Overnight)
FIS Lockbox Processing
Lockbox #13369
100 Grove Road
Suite E
West Deptford, NJ 08066

Remit US Wire Transfers to:
Account Name: Draeger Inc.
Account Number: 00-494-936
Transit Routing: 021001033
SWIFT: BKTRUS33
Deutsche Bank Trust Company Americas
60 Wall Street 25th Fl, New York, NY 10005

Service note

Customer no. 150061090 Number of report 304948917 Date of receiving

Please reference on inquiries

Customer
TOWNSHIP OF VERONA
ATTN: CHRISTOPHER KIERNAN
600 BLOOMFIELD AVE
VERONA NJ 07044-1822

Consignee
VERONA TOWNSHIP POLICE DEPARTMENT
ATTN: CHIEF DOUGLAS J. HUBER
600 BLOOMFIELD AVE
VERONA NJ 07044-1822

Your order

Date of order:

02/18/2020

Your reference:

20-00713

NL-Text

Your contact person

Service Support-IDT

800-437-2437 OPT 5

SS-IDT@draeger.com

Page 1

Item	Quantity	Part no. Description
		Service Order: 142580438
		REPAIR/ARWM-0092
		Eq.No. : 1030158976 SN: ARWM-0092
		Material: 8314246 ALCOTEST 7110 MK III USA
		Inv.No. :
		Location:
		REPAIR/ARWM-0092
1.0	H	R001 Repair time - normal hours
1	EA	6808374 Geared Engine, A7110/A9510
1	EA	6808455 Sensor Alcotest B



Delivery receipt



Customer no.
150061090

Number of report
304948917

Please reference on inquiries

Date of receiving / / Delivery receipt date
04/16/2020

Consignee, 150061091
VERONA TOWNSHIP POLICE DEPARTMENT
ATTN: CHIEF CHRISTOPHER KIERNAN
PO#ARWM-0092
600 BLOOMFIELD AVE
VERONA NJ 07044-1822

Customer, 150061090
TOWNSHIP OF VERONA
ATTN: CHIEF CHRISTOPHER KIERNAN
PO#ARWM-0092
600 BLOOMFIELD AVE
VERONA NJ 07044-1822

Your order

Date of order:

02/18/2020

Purch.ord.no.:

20-00713

Branch text

Draeger contact person

Service Support-IDT

800-437-2437 OPT 5

SS-IDT@draeger.com

Page 1

Quantity	Description	Part no.	Equipment - No.	Serial - No.
	ALCOTEST 7110 MK III USA	8314246	1030158976	ARWM-0092
	REPAIR/ARWM-0092			

Draeger Inc.
Our Tax ID: 23-1699096
3135 Quarry Road; Telford, PA 18969
An Equal Opportunity Employer M / F / V / H
Telephone 800-437-2437
<http://www.draeger.com>

Remit to:
LOCKBOX (Standard USPS)
Draeger, Inc.
PO Box 13369
Newark, New Jersey
07101-3362

Remit to:
LOCKBOX (Overnight)
FIS Lockbox Processing
Lockbox #13369
100 Grove Road
Suite E
West Deptford, NJ 08066

Remit US Wire Transfers to:
Account Name: Draeger Inc.
Account Number: 00-494-936
Transit Routing: 021001033
SWIFT: BKTRUS33
Deutsche Bank Trust Company Americas
60 Wall Street 25th Fl, New York, NY 10005

STATE OF NEW JERSEY
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
BREATH TESTING INSTRUMENTATION SERVICE REPORT

1. Department: Verona Twp. Police Department 600 Bloomfield Ave Verona, NJ 07044	2. Contact: Ptln. Ed Carattini 3. Phone Number: (973) 239-5000	4. Date: 06/01/2020 5. County: Essex
6. Alcotest Instrument Serial Number: <p style="text-align: center;">ARWM-0092</p>	7. Simulator Component Serial Number: <p style="text-align: center;">N/A</p>	8. Temperature Probe Component Serial Number: <p style="text-align: center;">N/A</p>

9. Reason for Service:
The above Alcotest was returned from outside evaluation and/or repair, and placed back in service.


10. Comments:
See Draeger Return and Repair Form

Last Known Sequential File #: N/A

- 11. The above Instrument/Component has been found to be in satisfactory working condition; no further action required.
- 12. The above Instrument/Component is placed out of service pending further evaluation.
- 13. The above Instrument/Component is placed back in service.

"I have been certified by the Attorney General as a Breath Test Coordinator/Instructor pursuant to N.J.A.C. 13:51, et. seq. In my official capacity as a Breath Test Coordinator/Instructor I perform inspections of evidential breath test devices and related components of evidential breath test systems. I have inspected the evidential breath test device listed on this report in my official capacity. The results of my inspection are recorded on this form. I certify that the forgoing statements made by me are true and accurate to the best of my knowledge. I am aware that if any of the forgoing statements made by me are willingly false, I am subject to punishment."

Tpr. Nicholas E. Mimikos #7413
Name & Badge Number (Print)


Signature

6/1/2020
Date

Alcotest 7110 Calibration Record

Equipment

Alcotest 7110 MKIII-C
Location: VERONA POLICE DEPT. Serial No.: ARWM-0092
Calibration File No.: 00680 Calib. Date: 06/01/2020 Calib. No.: 00040
Certification File No.: 00671 Cert. Date: 01/29/2020 Cert. No.: 00029
Linearity File No.: 00672 Lin. Date: 01/29/2020 Lin. No.: 00029
Solution File No.: 00679 Soln. Date: 04/15/2020 Soln. No.: 00194
Sequential File No.: 00680 File Date: 06/01/2020

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDXA S3-0065
Control Solution %: 0.100% Expires: 10/14/2021
Solution Control Lot: 19270 Bottle No.: 0362

Coordinator

Last Name: MIMIKOS

First Name: NICHOLAS

MI: E.

Signature: TPR. N.A. #7413

Badge No.: 7413


Date: 06/01/2020

*Black Key Temperature Probe Serial.....#

DDHH P2-055 (NM)

*Digital NIST Temperature Measuring System Serial.....#

191957489 (NM)

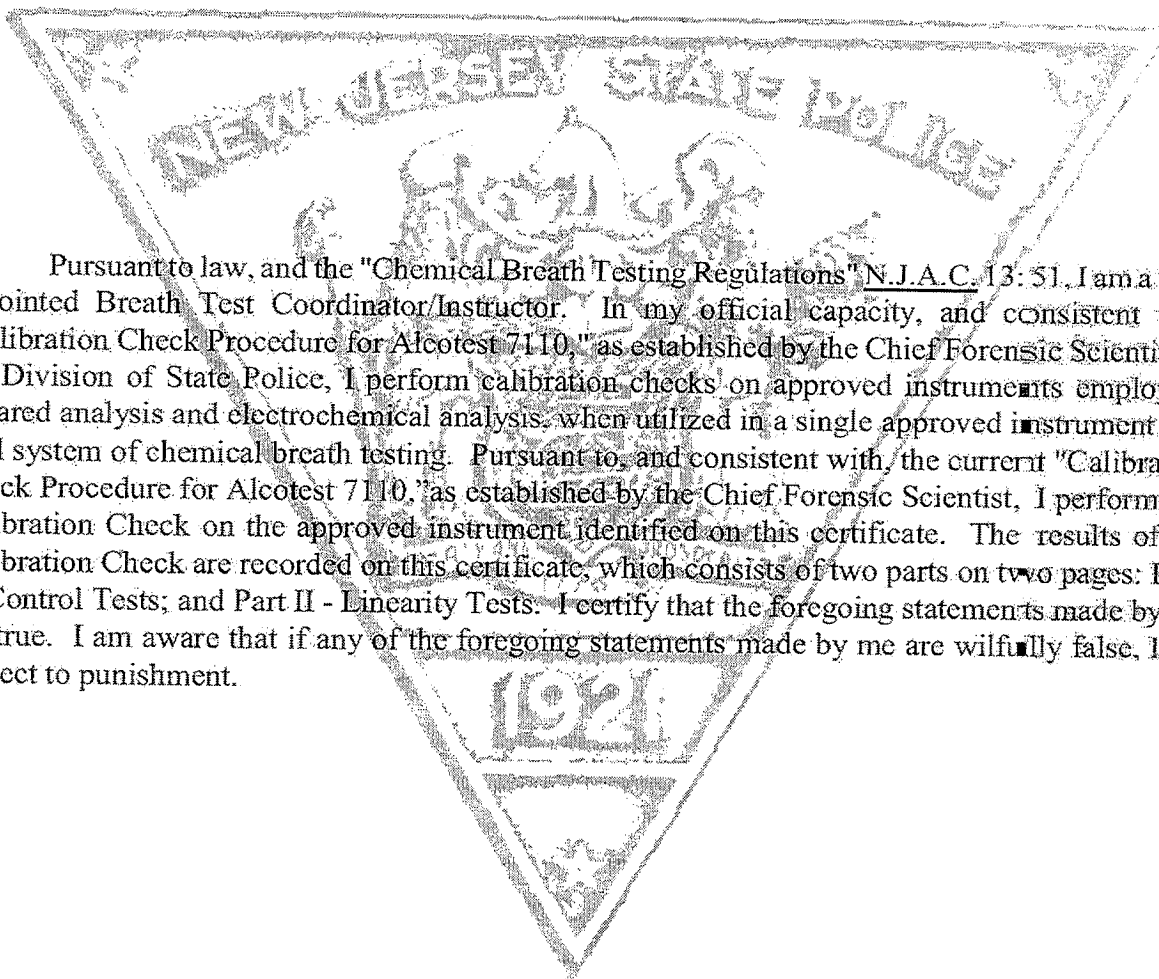

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part I - Control Tests

Equipment

Alcotest 7110 MKIII-C
Location: VERONA POLICE DEPT. Serial No.: ARWM-0092
Calibration File No.: 00680 Calib. Date: 06/01/2020 Calib. No.: 00040
Certification File No.: 00681 Cert. Date: 06/01/2020 Cert. No.: 00030
Linearity File No.: 00672 Lin. Date: 01/29/2020 Lin. No.: 00029
Solution File No.: 00679 Soln. Date: 04/15/2020 Soln. No.: 00194
Sequential File No.: 00681 File Date: 06/01/2020

Calibrating Unit: WET Model No.: CU-34 Serial No.: DDXA S3-0065
Control Solution %: 0.100% Expires: 10/14/2021
Solution Control Lot: 19270 Bottle No.: 0362

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	10:28D		
Control 1 EC	0.099%	10:29D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.101%	10:29D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:29D		
Control 2 EC	0.100%	10:30D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.100%	10:30D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:30D		
Control 3 EC	0.100%	10:31D	33.9°C	*** TEST PASSED ***
Control 3 IR	0.101%	10:31D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:31D		

All tests within acceptable tolerance.

Coordinator

Last Name: MIMIKOS

First Name: NICHOLAS

MI: E.

Signature: TPR. AA #7413

Badge No.: 7413

Date: 06/01/2020

Pursuant to law, and the "Chemical Breath Testing Regulations" N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity, and consistent with "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on approved instruments employing infrared analysis and electrochemical analysis, when utilized in a single approved instrument as a dual system of chemical breath testing. Pursuant to, and consistent with, the current "Calibration Check Procedure for Alcotest 7110," as established by the Chief Forensic Scientist, I performed a Calibration Check on the approved instrument identified on this certificate. The results of my Calibration Check are recorded on this certificate, which consists of two parts on two pages: Part I - Control Tests; and Part II - Linearity Tests. I certify that the foregoing statements made by me are true. I am aware that if any of the foregoing statements made by me are wilfully false, I am subject to punishment.

Alcotest 7110 Calibration Certificate

Part II - Linearity Tests

Equipment	Alcotest 7110 MKIII-C	Serial No.: ARWM-0092
Location:	VERONA POLICE DEPT.	
Calibration File No.:	00680	Calib. Date: 06/01/2020
Certification File No.:	00681	Calib. No.: 00040
Linearity File No.:	00682	Cert. Date: 06/01/2020
Solution File No.:	00679	Cert. No.: 00030
Sequential File No.:	00682	Lin. Date: 06/01/2020
		Lin. No.: 00030
		Soln. Date: 04/15/2020
		Soln. No.: 00194
		File Date: 06/01/2020
Calibrating Unit:	WET	Model No.: CU-34
Control Solution %:	0.040%	Serial No.: DDWE S3-0196
Solution Control Lot:	18240	Expires: 07/31/2020
		Bottle No.: 1291
Calibrating Unit:	WET	Model No.: CU-34
Control Solution %:	0.080%	Serial No.: DDXD S3-0191
Solution Control Lot:	18250	Expires: 08/06/2020
		Bottle No.: 0199
Calibrating Unit:	WET	Model No.: CU-34
Control Solution %:	0.160%	Serial No.: DDWE S3-0205
Solution Control Lot:	18260	Expires: 08/21/2020
		Bottle No.: 1286

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	10:55D		
Control 1 EC	0.040%	10:55D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.038%	10:55D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:56D		
Control 2 EC	0.040%	10:57D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.038%	10:57D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	10:58D		
Control 3 EC	0.080%	10:59D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.076%	10:59D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:00D		
Control 4 EC	0.080%	11:01D	34.0°C	*** TEST PASSED ***
Control 4 IR	0.076%	11:01D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:02D		
Control 5 EC	0.158%	11:03D	33.9°C	*** TEST PASSED ***
Control 5 IR	0.156%	11:03D	33.9°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:04D		
Control 6 EC	0.160%	11:05D	34.0°C	*** TEST PASSED ***
Control 6 IR	0.155%	11:05D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	11:06D		

All tests within acceptable tolerance.

Coordinator

Last Name: MIMIKOS

First Name: NICHOLAS

MI: E.

Signature: _____

TPR. N.A. #7413

Badge No.: 7413

Date: 06/01/2020

Calibrating Unit

New Standard Solution Report

Equipment

Alcotest 7110 MKIII-C		Serial No.: ARWM-0092
Location: VERONA POLICE DEPT.		
Calibration File No.: 00680	Calib. Date: 06/01/2020	Calib. No.: 00040
Certification File No.: 00681	Cert. Date: 06/01/2020	Cert. No.: 00030
Linearity File No.: 00682	Lin. Date: 06/01/2020	Lin. No.: 00030
Solution File No.: 00683	Soln. Date: 06/01/2020	Soln. No.: 00195
Sequential File No.: 00683	File Date: 06/01/2020	

Calibrating Unit: WET	Model No.: CU-34	Serial No.: DDXA S3-0065
Control Solution %: 0.100%		Expires: 09/26/2020
Solution Control Lot: 18320		Bottle No.: 1085

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	12:19D		
Control 1 EC	0.101%	12:20D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.100%	12:20D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:21D		
Control 2 EC	0.101%	12:21D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.100%	12:21D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:22D		
Control 3 EC	0.101%	12:22D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.101%	12:22D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	12:23D		

All tests within acceptable tolerance.

On this date, I installed the above indicated "NEW SOLUTION" in accordance with Alcotest 7110 operator training and procedures established by the (NJSP) Chief Forensic Scientist.

Temperature Probe Serial Number: DDWJ P2-208 (NM)

Changed By:

Last Name: MIMIKOS

First Name: NICHOLAS

MI: E.

Signature: TPR. N.A. #7413

Badge No.: 7413

Date: 06/01/2020

**Alcotest 7110 MKIII-C Calibration
NIST-Traceable Digital Thermometer Readings**

Coordinator:

TPR. Nicholas E. Mimikos
Name

7413
Badge No.

Location:

Verona Police Dept.
Agency

ARWm-0092
Alcotest Serial No.

Equipment:

191957489
Digital NIST Temperature Measuring System Serial No.

Simulator Solution Concentration	CU-34 Simulator Serial No.	Time Simulators Started to Heat	Time Temp. Reading Obtained	Temp. Reading on NIST Traceable Thermometer
0.04%	DDWE S3-0196	08:59D	10:18D	34.0°C
0.08%	DDXD S3-0191	08:59D	10:19D	34.0°C
0.10%	DDXA S3-0065	08:59D	10:20D	34.0°C
0.16%	DDWE S3-0205	08:59D	10:21D	33.9°C

Pursuant to law and the "Chemical Breath Testing Regulations" established at N.J.A.C. 13:51, I am a duly appointed Breath Test Coordinator/Instructor. In my official capacity and consistent with the "Calibration Check Procedure for Alcotest 7110" as established by the Chief Forensic Scientist of the Division of State Police, I perform calibration checks on Alcotest 7110 MKIII-C instruments. Pursuant to and consistent with the current "Calibration Check Procedure for Alcotest 7110", I performed a Calibration Check Procedure on the Alcotest 7110 MKIII-C instrument identified on this certificate. Pursuant to the current "Calibration Check Procedure for Alcotest 7110", I used the Digital NIST-traceable Temperature Measuring System identified on this certificate to confirm that the temperatures of the 0.10%, 0.04%, 0.08%, and 0.16% Simulator Solutions used in the respective CU-34 Simulators identified on this certificate, were 34.0 degrees Celsius \pm 0.2 degrees Celsius. I hereby certify that I truthfully recorded on this certificate the temperatures of each of the simulator solutions as shown on the Digital NIST-traceable Temperature Measuring System thermometer. I am aware that if any of the foregoing statements made by me are willfully false, I am subject to punishment.

TPR. N.E. Mimikos #7413
Coordinator's Signature

6/1/2020
Date



Dräger

Alcotest 7110

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 has been tested for accuracy and found to be in compliance with the National Highway Traffic Safety Administration Standard for evidential breath testing devices. The Alcotest MKIII-C is compliant as a "mobile" and "nonmobile" EBT with 49 FR 48854, 49 FR 48864, and 58 FR 48705. The manufacturer recommends accuracy verification of this instrument within 12 months of the calibration date below, or sooner, according to your state's specifications.

Certification Date:

Serial Number:

04/15/2020

ARWM-0092

Draeger, Inc. 



Calibration complies with ISO/IEC 17025, ANSI/NCSL Z540-1, and 9001



Cert. No.: 4000-10176214

Traceable® Certificate of Calibration for Digital Thermometer

Manufactured for and distributed by : VWR International LLC Radnor Corporate Center, Bldg 1, Ste 200, 100 Matsonford Road, Radnor, PA, 19087

Instrument Identification:

Model: 61220-601, S/N: 191957489 Manufacturer: Control Company

Standards/Equipment:

Table with 4 columns: Description, Serial Number, Due Date, NIST Traceable Reference. Lists calibration equipment like Temperature Calibration Bath and Temperature Probe with their respective serial numbers and due dates.

Certificate Information:

Technician: 104 Procedure: CAL-06 Cal Date: 13 Feb 2019 Cal Due Date: 13 Feb 2021
Test Conditions: 37.61%RH 23.29°C 1026mBar

Calibration Data: (New Instrument)

Table with 11 columns: Unit(s), Nominal, As Found, In Tol, Nominal, As Left, In Tol, Min, Max, ±U, TUR. Shows calibration results for 4 different units.

This certificate indicates Traceability to standards provided by (NIST) National Institute of Standards and Technology and/or a National Standards Laboratory.

A Test Uncertainty Ratio of at least 4:1 is maintained unless otherwise stated and is calculated using the expanded measurement uncertainty. Uncertainty evaluation includes the instrument under test and is calculated in accordance with the ISO 'Guide to the Expression of Uncertainty in Measurement' (GUM).

Nominal=Standard's Reading; As Left=Instrument's Reading; In Tol=In Tolerance; Min/Max=Acceptance Range; ±U=Expanded Measurement Uncertainty; TUR=Test Uncertainty Ratio; Accuracy=±(Max-Min)/2; Min=As Left Nominal(Rounded) - Tolerance; Max= As Left Nominal(Rounded) + Tolerance;

Nicol Rodriguez, Quality Manager

Aaron Justice, Technical Manager

Maintaining Accuracy:

In our opinion once calibrated your Digital Thermometer should maintain its accuracy. There is no exact way to determine how long calibration will be maintained. Digital Thermometer change little, if any at all, but can be affected by aging, temperature, shock, and contamination.

Recalibration:

For factory calibration and re-certification traceable to National Institute of Standards and Technology contact Control Company.

CONTROL COMPANY 12554 Galveston RD Suite B230 Webster TX USA 77598
Phone 281 482-1714 Fax 281 482-9448 sales@control3.com www.control3.com

Control Company is an ISO/IEC 17025:2005 Calibration Laboratory Accredited by (A2LA) American Association for Laboratory Accreditation, Certificate No. 1750.01.
Control Company is ISO 9001:2008 Quality Certified by DNV GL, Certificate No. CERT-01805-2006-AQ-HOU-RvA.
International Laboratory Accreditation Cooperation (ILAC) - Multilateral Recognition Arrangement (MRA).



Calibration complies with ISO/IEC
17025, ANSI/NCSL Z540-1, and 9001



Cert. No.: 4000-10176214

Traceable® Certificate of Calibration for Digital Thermometer

CONTROL COMPANY 12554 Galveston RD Suite B230 Webster TX USA 77598
Phone 281 482-1714 Fax 281 482-9448 sales@control3.com www.control3.com

Control Company is an ISO/IEC 17025:2005 Calibration Laboratory Accredited by (A2LA) American Association for Laboratory Accreditation, Certificate No. 1750.01.
Control Company is ISO 9001:2008 Quality Certified by DNV GL, Certificate No. CERT-01805-2006-AQ-HOU-RvA.
International Laboratory Accreditation Cooperation (ILAC) - Multilateral Recognition Arrangement (MRA).

Dräger

Simulator

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)
Draeger, Inc.

Model: ALCOTEST CU34

Model: MARK IIA

X-Cal 2000 (Alcosim)

Other: _____

Serial Number:

DDWES3-0196

Certification Date:

Technician:

Re-Certification Due Date:

3-10-20

M

3-10-21

Dräger

Simulator

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)
Draeger, Inc.

Model: ALCOTEST CU34

Model: MARK IIA

X-Cal 2000 (Alcosim)

Other: _____

Serial Number:

DDXDS3-0191

Certification Date:

Technician:

Re-Certification Due Date:

3-9-20

M

3-9-21

Dräger

Simulator

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)
Dräger, Inc.

- Model: ALCOTEST CU34
- Model: MARK IIA
- X-Cal 2000 (Alcosim)
- Other: _____

Serial Number:

DDWES3-0205

Certification Date:

3-10-20

Technician:

ML

Re-Certification Due Date:

3-10-21

Dräger

Alcotest 7110 Temperature Probe

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your state's specifications. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest 7110.

Serial Number Temp Probe:

DDHHP2-055

Certification Date:

3-11-20

Next Certification Due:

3-11-21

Probe Value:

104

Dräger, Inc.

ML

Dräger

Simulator

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)
Draeger, Inc.

- Model: ALCOTEST CU34
- Model: MARK IIA
- X-Cal 2000 (Alcosim)
- Other: _____

Serial Number:

DDXA 53-0065

Certification Date:

3/13/20

Technician:

BS / MFB

Re-Certification Due Date:

3/13/21

Dräger

Alcotest 7110 Temperature Probe

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your state's specifications. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest 7110.

Serial Number Temp Probe:

DDWJ P2-208

Certification Date:

3/13/20

Next Certification Due:

3/13/21

Probe Value:

104

Draeger, Inc.

BS

MFB



State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

PHILIP D. MURPHY
Governor

SHEILA Y. OLIVER
Lt. Governor

GURBIR S. GREWAL
Attorney General

PATRICK J. CALLAHAN
Colonel

CERTIFICATION OF ANALYSIS
0.100 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1174 to 0.1246 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 10/21/2019

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 19270

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1216 to 0.1232 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is October 14, 2021.

As Assistant Chief Forensic Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Michael Kennedy
Assistant Chief Forensic Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 28 day of October, 2019.

Notary

KAREN E. STAHL
NOTARY PUBLIC OF NEW JERSEY
Commission # 50110522
My Commission Expires 8/13/2024

An Internationally Accredited Agency

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

PHILIP D. MURPHY
Governor

SHEILA Y. OLIVER
Lt. Governor

GURBIR S. GREWAL
Attorney General

PATRICK J. CALLAHAN
Colonel

CERTIFICATION OF ANALYSIS
0.040 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.0469 to 0.0499 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 08/28/2018

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 18240

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0486 to 0.0489 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is July 31, 2020.

As Research Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Handwritten signature of Ali M. Alaouie

Ali M. Alaouie, Ph.D.
Research Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 29th day of August, 2018.

Mary E. McLaughlin
Notary

MARY ELIZABETH MCLAUGHLIN

ID # 2052190
NOTARY PUBLIC
STATE OF NEW JERSEY
My Commission Expires Dec. 24, 2018



An Internationally Accredited Agency

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

PHILIP D. MURPHY
Governor

SHEILA Y. OLIVER
Lt. Governor

GURBIR S. GREWAL
Attorney General

PATRICK J. CALLAHAN
Colonel

CERTIFICATION OF ANALYSIS
0.080 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.0939 to 0.0997 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 08/30/2018

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 18250

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.0976 to 0.0987 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is August 06, 2020.

As Assistant Chief Forensic Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Handwritten signature of Michael Kennedy

Michael Kennedy
Assistant Chief Forensic Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 4th day of September, 2018.

Handwritten signature of Mary Elizabeth McLaughlin
Notary

MARY ELIZABETH MCLAUGHLIN

ID # 2052190
NOTARY PUBLIC
STATE OF NEW JERSEY
My Commission Expires Dec. 24, 2018.



"An Internationally Accredited Agency"

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

PHILIP D. MURPHY
Governor

GURBIR S. GREWAL
Attorney General

SHEILA Y. OLIVER
Lt. Governor

PATRICK J. CALLAHAN
Colonel

CERTIFICATION OF ANALYSIS
0.160 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1878 to 0.1994 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 09/13/2018

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 18260

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1938 to 0.1964 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is August 21, 2020.

As Assistant Chief Forensic Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Michael Kennedy
Michael Kennedy
Assistant Chief Forensic Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 15th day of September 2018.

Mary E. McLaughlin
Notary

MARY ELIZABETH MCLAUGHLIN

ID # 2052190
NOTARY PUBLIC
STATE OF NEW JERSEY
My Commission Expires Dec. 24, 2018



An Internationally Accredited Agency

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable





State of New Jersey

OFFICE OF THE ATTORNEY GENERAL
DEPARTMENT OF LAW AND PUBLIC SAFETY
DIVISION OF STATE POLICE
POST OFFICE BOX 7068
WEST TRENTON, NJ 08628-0068
(609) 882-2000

PHILIP D. MURPHY
Governor

SHEILA Y. OLIVER
Lt. Governor

GURBIR S. GREWAL
Attorney General

PATRICK J. CALLAHAN
Colonel

CERTIFICATION OF ANALYSIS
0.100 PERCENT BREATH ALCOHOL SIMULATOR SOLUTION

ACCEPTANCE SPECIFICATIONS FOR BREATH ALCOHOL SIMULATOR SOLUTION: Ethyl alcohol concentration within, but not exceeding, the range of 0.1174 to 0.1246 grams per 100 milliliters of solution.

MANUFACTURER: Draeger Safety, Inc.

ANALYSIS DATE: 10/09/2018

BREATH ALCOHOL SIMULATOR SOLUTION LOT NUMBER: 18320

Representative samples of the above-referenced Lot Number were tested by Gas Chromatography and found to have a mean ethyl alcohol concentration range of 0.1213 to 0.1232 grams per 100 milliliters of solution.

This lot of breath alcohol simulator solution may be utilized as a known traceable standard for the purpose of conducting periodic tests, pursuant to N.J.A.C. 13:51-4.3, of approved breath test instruments (N.J.A.C. 13:51-3.5) utilized by law enforcement agencies in this State. The manufacturer's expiration date for this lot of breath alcohol simulator solution is September 26, 2020.

As Assistant Chief Forensic Scientist for the Division of State Police, I hereby certify and attest that the tests and results documented in this Certificate of Analysis were performed at the Office of Forensic Sciences of the Division of State Police on properly functioning and calibrated instruments and equipment. All procedures utilized are accurate, objective, and performed on a routine basis by personnel within the Office of Forensic Sciences, in accordance with their professional duties and responsibilities.

Michael Kennedy
Assistant Chief Forensic Scientist
NJSP Office of Forensic Sciences

Sworn to and subscribed before me this 19th day of October, 2018.

Mary E. McLaughlin
Notary

MARY ELIZABETH MCLAUGHLIN

ID # 2052190
NOTARY PUBLIC
STATE OF NEW JERSEY
My Commission Expires Dec. 24, 2018



An Internationally Accredited Agency

New Jersey Is An Equal Opportunity Employer
Printed on Recycled Paper and Recyclable



DEPARTMENT OF
Patrol and Public Safety
 Office is to certify that

NICHOLAS E. MIMIKOS
NEW JERSEY STATE POLICE

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER 142 OF
 THE LAWS OF 1966 IN THE OPERATION OF THE **ALCOTEST 7110 MKIII-C**




A METHOD TO DETERMINE INTOXICATION,
 GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY, THE 23rd DAY OF OCTOBER

TWO THOUSAND AND **FOURTEEN**


 SUPERVISOR
 NEW JERSEY STATE POLICE


 ATTORNEY GENERAL
 STATE OF NEW JERSEY

ORIGINAL COURSE DATES

DATE	Refresher Course PLACE	INSTRUCTOR
1. 6-3-16	BERGEN C.P.A.	
2. 1-19-18	BERGEN C.P.A.	
3. 2-20-20	BERGEN C.P.A.	
4.		
5.		
6.		
7.		
8.		
9.		

S.P. 2338 (Rev. 08/13)

DEPARTMENT OF
Traffic and Public Safety
 This is to certify that

Nicholas E. Mimikos


Breath Test Coordinator/Instructor

IS QUALIFIED AND COMPETENT TO CONDUCT CHEMICAL BREATH ANALYSES PURSUANT TO CHAPTER 142 OF
 THE LAWS OF 1966 IN THE OPERATION OF THE Alcotest 7110 MKIII-C
 A METHOD TO DETERMINE INTOXICATION.

GIVEN UNDER MY HAND AT TRENTON, NEW JERSEY THIS 9th DAY OF October

TWO THOUSAND AND Eighteen


 COLONEL
 NEW JERSEY STATE POLICE


 ATTORNEY GENERAL
 STATE OF NEW JERSEY

ORIGINAL COURSE DATES _____

	DATE	Refresher Course PLACE	INSTRUCTOR
1.	_____	_____	_____
2.	_____	_____	_____
3.	_____	_____	_____
4.	_____	_____	_____
5.	_____	_____	_____
6.	_____	_____	_____
7.	_____	_____	_____
8.	_____	_____	_____
9.	_____	_____	_____

Dräger

Alcotest 7110 Temperature Probe

CERTIFICATE OF ACCURACY

This is to certify that the Alcotest 7110 Temperature Probe has been tested for accuracy with instrumentation that is traceable to the National Institute of Standards and Technology (NIST). The manufacturer recommends accuracy verification of the Temperature Probe within 12 months of the certification date below, or sooner, according to your state's specifications. For accurate temperature readings, the probe value on this certificate, noted below, must be programmed into the Alcotest 7110.

Serial Number Temp Probe: DDWJP2-208 Certification Date: 3/13/20 Next Certification Due: 3/13/21

Probe Value: 104 Draeger, Inc. BS / MFB

Dräger

Simulator

CERTIFICATE OF ACCURACY

This Certificate of Accuracy verifies that the specified unit has been examined and found to be in compliance with National Highway and Traffic Safety Administration regulations for devices used to calibrate Evidential Breath Testers.
(F.R. Vol. 59 No. 249 12/19/94 Notices)
Draeger, Inc.

- Model: ALCOTEST CU34
- Model: MARK IIA
- X-Cal 2000 (Alcosim)
- Other: _____

Serial Number: DDXA S3-0065

Certification Date: 3/13/20 Technician: BS / MFB Re-Certification Due Date: 3/13/21

Service note

Customer no. 150061090 Number of report 306964468 Date of receiving 04/05/2022

Please reference on inquiries

Customer
TOWNSHIP OF VERONA
600 BLOOMFIELD AVE
VERONA NJ 07044-1822

Consignee
VERONA TOWNSHIP POLICE DEPARTMENT
600 BLOOMFIELD AVE
VERONA NJ 07044-1822

Your order

Date of order:
04/04/2022
Your reference:
DDXAS3-0065

NL-Text

Maintenance device list

Your contact person

Service Support-IDT
800-437-2437 OPT 5
SS-IDT@draeger.com

Page 1

Item	Quantity	Part no.	Description
			Service Order: 146556385
			CALIBRATION DDXAS3-0065
		Eq.No. : 1020916869	SN: DDXAS3-0065
		Material: 4540083	Simulator,CU34 110V elec ctrl w/o tmeter
		Inv.No. :	
		Location:	
			CALIBRATION DDXAS3-0065
			CALIBRATION DDXAS3-0065
	0.0 H		R001 Repair time - normal hours
	1 EA		4412034 Hose pump-sim w/sim-cuvette hose 2" KIT



Acknowledgement



Customer no.
150061090

Number of report
306964468.
Please reference on inquiries

Date of receiving
/ /

Customer
TOWNSHIP OF VERONA
ATTN: CHIEF CHRISTOPHER KIERNAN
PO: DDXAS3-0065
600 BLOOMFIELD AVE
VERONA NJ 07044-1822
USA

Consignee
VERONA TOWNSHIP POLICE DEPARTMENT
ATTN: P/O H. CARATTINI JR.
PO: DDXAS3-0065
600 BLOOMFIELD AVE
VERONA NJ 07044-1822
USA

Your order

Date of order
04/04/2022
Purch. ord. no.
DDXAS3-0065

Branch text

Your contact person

TIFFANY HUFF
800-437-2437 OPT 5

Page 1

Item	Quantity	Description	Part No.	Equipment No.	Serial No.
10	001	Simulator, CU34 110V elec ctr	4540083	1020916869	DDXAS3-0065
20	001	Simulator, temperature probe	4412025	1021553377	DDWJP2-208

Date of delivery (CW/YY): 14/22

Draeger Inc.
Our Fax ID: 23-1699096
3135 Quarry Road, Telford, PA 18969
An Equal Opportunity Employer M/F/V/H
Telephone 800-437-2437
<http://www.draeger.com>

Remit to:
LOCKBOX (Standard USPS)
Draeger, Inc.
PO Box 13369
Newark, New Jersey
07101-3362

Remit to:
LOCKBOX (Overnight)
FIS Lockbox Processing
Lockbox #13369
100 Grove Road
Suite E
West Deptford, NJ 08066

Remit US Wire Transfers to:
Account Name: Draeger Inc.
Account Number: 00-494-936
Transit Routing: 021001033
SWIFT: BKTRUS33
Deutsche Bank Trust Company Americas
60 Wall Street 25th Fl, New York, NY 10005

called for pick up 4/13/22 @ 0924
Pick up conf # MMUA55

4/13/22

Please ship UPS or FEDEX Only

Please write this number on shipping label:

Service Notification # 306964468

Please Send To:

Draeger Inc. - ATTN: SERVICE DEPT.
7256 S. Sam Houston Pkwy West, Suite 100
Houston, TX 77085

MUR3

FedEx Express Package US Airbill

FedEx Tracking Number: 8146 6375 7199

Form ID No. 0215

From: Please print and press hard.
Date: 4/13/22
Sender's Name: Verona Police Dept.
Ed Carattini
Company: TOWNSHIP OF VERONA
Address: 600 BLOOMFIELD AVE
City: VERONA State: NJ ZIP: 07044-1822

Sender's FedEx Account Number: 6405-41697-6
Phone: 973, 239-5000

4 Express Package Service *To most locations. Packages up to 150 lbs. For packages over 150 lbs, use the FedEx Express Freight US Airbill.

FedEx First Overnight
Earliest next business morning delivery to select locations. Friday shipments will be delivered on Monday unless Saturday Delivery is selected.

FedEx Priority Overnight
Next business morning.* Friday shipments will be delivered on Monday unless Saturday Delivery is selected.

FedEx Standard Overnight
Next business afternoon.* Saturday Delivery NOT available.

FedEx 2Day A.M.
Second business morning.* Saturday Delivery NOT available.

FedEx 2Day
Second business afternoon.* Thursday shipments will be delivered on Monday unless Saturday Delivery is selected.

FedEx Express Saver
Third business day.* Saturday Delivery NOT available.

5 Packaging *Declared value limit \$500.

FedEx Envelope* FedEx Pak* FedEx Box FedEx Tube Other

6 Special Handling and Delivery Signature Options Fees may apply. See the FedEx Service Guide.

Saturday Delivery
NOT available for FedEx Standard Overnight, FedEx 2Day A.M., or FedEx Express Saver.

No Signature Required
Packages may be left without obtaining a signature for delivery.

Direct Signature
Someone at recipient's address may sign for delivery.

Indirect Signature
If no one is available at recipient's address, someone at a neighboring address may sign for delivery. For residential deliveries only.

Does this shipment contain dangerous goods? (One box must be checked.)

No Yes As per attached Shipper's Declaration. Yes Shipper's Declaration not required. Dry Ice Dry Ice, 9, UN 1845 _____ x _____ kg

Restrictions apply for dangerous goods — see the current FedEx Service Guide. Cargo Aircraft Only

Your Internal Billing Reference
First 24 characters will appear on invoice.

To Recipient's Name: Draeger, Inc
Attn: Service Dept (Service Notification # 306964468)
Company: West
Address: 7256 S. Sam Houston Pkwy
Ste 100
City: Houston, State: TX ZIP: 77085

Phone: 800, 437-2437

Hold Weekday
FedEx location address
REQUIRED, (M-F) penalties for
FedEx First Overnight.

Hold Saturday
FedEx location address
REQUIRED, (S) penalties for
FedEx Priority Overnight and
FedEx 2Day to select locations.

7 Payment Bill to:

Enter FedEx Acct. No. or Credit Card No. below.

Sender Acct. No. in Section 1 will be billed. Recipient Third Party Credit Card Cash/Check

FedEx Acct. No. _____ Exp. Date _____
Credit Card No. _____

Total Packages: 1 Total Weight: _____ lbs. Total Declared Value: \$ _____

Please do not detach this label from the package and FedEx Office.

611